
### Variable Stroke Straight Line Action Clamps | Operation

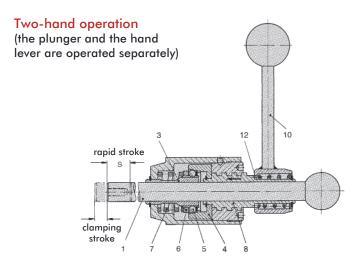

DESTACO's variable stroke Straight Line clamps are used in applications where workpiece thicknesses and workpiece tolerances vary. These clamps are suitable for clamping between ribs and hollow spaces difficult to reach.

Compact design and different types of operation allow for application of the Straight Line clamps in fixtures for mass production as well as for single part production.

#### Mounting types

- Foot base (FO Series)
- Flange mount (FL Series)
- Through hole mount (G Series)

#### Type of operation

- Two hand operation
- The hand lever (10) and the plunger (1) are separate. The hand lever is connected to the clamping mechanism. The plunger can be removed from the clamp
- One-hand operation
- The hand lever (10) or the hand wheel (11) and the plunger (2) are linked. The plunger is retained within the clamp.


#### Clamping operation

The plunger (1) or (2) which is guided within the clamp body contacts the workpiece. By rotating the hand lever (10) or the hand wheel (11) clock-wise the clamping stroke, S1 is engaged and the plunger is tightly gripped by the slotted clamping sleeve (3).

#### Operating principle

The hand lever's (10) clock-wise rotation causes the threaded sleeve (8) and the conical sleeve (4) to which it is connected to move in the direction of the arrow shown in the drawing. The conical sleeve produces a force-locking connection between the slotted clamping sleeve (3) and the plunger by means of the ball bearings (5) located at the clamping sleeve's perimeter.

Due to the force-locking connection, the plunger rotates and produces the clamping stroke \$1. The plungers rotation may be compensated for by means of a swivel hold-down piece.

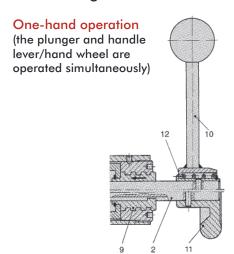

The clamping strokes S1 specified in this catalog were measured with no opposing forces present while measurements were taken. When clamping this product against a workpiece, the clamping stroke S1 is reduced by the force-locking connection between the plunger and the workpiece. The straight-action clamp is unlocked by turning the hand lever or the hand wheel counter-clockwise. This method is used for both the one-hand and the two-hand operation types. This counter-clockwise rotation makes the conical sleeve (4) and the threaded sleeve (8) or (9) move backward. The pressure spring (7) pushes back the relieved ball bearings (5) via the pressure ring (6).

The force-locking connection between the slotted clamping sleeve and the plunger can be moved freely again. Straight Line clamps which are two-hand operated can also be applied to pull actions when the plunger is inserted in the clamp's housing in the opposite direction. On the one hand operated clamp, the rotation inducing the clamping stroke \$1 is directly transmitted from the plunger (2) or the hand wheel to the threaded sleeve (9) via a groovespring connection. The clamping and unclamping operations are executed in the same way as described before.

#### Handling

To change the position of the handle while in the clamped or the unclamped position, pull the hand lever off its spline (12) and set it in the desired position.

#### **Important**


The holding forces specified in the catalog refer to the maximum load exerted on the clamp by counter-forces. For details concerning the clamping force FS exerted on the workpiece by the clamp and depending on the operation force FB (manual force), please see the chart on the next page.


The clamping force is proportional to the operation force. The achieved clamping force must not exceed the maximum holding force.


As the Straight Line clamps, with the exception of the F-160 model, are designed only for axial load, we recommend to use an additional radial support for the plunger in the event of side load.



## Variable Stroke Straight Line Action Clamps | Technical Information

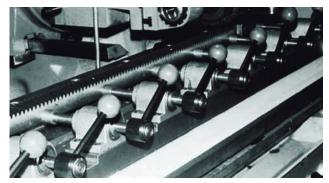



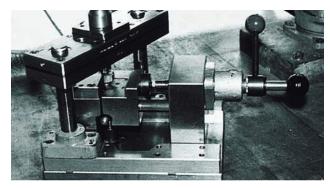

Model FL-160 with plunger 16/100 on a punching fixture



#### **FO** Series

Mounting type: flange base foot mount Operating method: one-hand or twohand operation



#### **FL** Series

Mounting type: front flange mount Operating method: one-hand or two-hand operation




#### **G** Series

Mounting type: through hole mount Operating method: one-hand or two-hand operation

		Оре	erating met	hod	Model	Max. holding capacity	f	lamping orce Fs with an	Rapid stroke	Max. clamping stroke	Weight –	
			One-hand operation	One-hand operation	1) Plunger order separately;	cupacity		oerating orce F <sup>B</sup>		Max. cl		
		Plunger and	Hand	Hand	see page MC-VSG-5		FB [lbs.]	FS [lbs.]	S	<b>S</b> 1		
Mounting	type	hand lever	lever	wheel		[lbs.] N	N	N	[mm]	[mm]	[lbs] Kg	
Foot				•	FO-082-40	[335] 1500		[100] 450	40	2,5	[0.72] 0,325	
mount		•			FO-120 <sup>1)</sup>	[675] 3000		[425] 1900	100, 200, 300	3	[1.19] 0,540	
			•		FO-121-45	[675] 3000		[425] 1900	45	3	[1.47] 0,665	
				•	FO-122-45	[675] 3000		[100] 450	40	3	[1.34] 0,610	
		•			FO-160 <sup>1)</sup>	[2020] 9000		[560] 2500	100, 200, 300	4	[2.73] 1,240	
	•		•		FO-161-60	[2020] 9000		[560] 2500	60	4	[3.40] 1,540	
(////				•	FO-162-60	[2020] 9000		[190] 850	60	4	[3.15] 1,430	
		•			FO-220 <sup>1)</sup>	[4045] 18000		[675] 3000	100, 200, 300	4	[5.85] 2,655	
			•		FO-221-80	[4045] 18000	1001	[675] 3000	80	4	[7.46] 3,385	
Flange		•			FL-120 <sup>1)</sup>	[675] 3000	[22] 100	[425] 1900	100, 200, 300	3	[1.07] 0,485	
mount	9		•		FL-121-45	[675] 3000		[425] 1900	45	3	[1.34] 0,610	
4				•	FL-122-45	[675] 3000		[100] 450	40	3	[1.21] 0,550	
	<u></u>	•			FL-160 <sup>1)</sup>	[2020] 9000		[560] 2500	100, 200, 300	4	[2.49] 1,130	
<b>¾</b> —	(O)		•		FL-161-60	[2020] 9000		[560] 2500	60	4	[3.15] 1,430	
				•	FL-162-60	[2020] 9000		[190] 850	60	4	[2.92] 1,325	
Through h	ole			•	G-082-40	[335] 1500		[100] 450	40	2,5	[0.66] 0,300	
mount		•			G-120 <sup>1)</sup>	[675] 3000		[425] 1900	100, 200, 300	3	[1.01] 0.470	
			•		G-121-45	[675] 3000		_	[425] 1900		3	[1.31] 0,595
₩ <u></u>				•	G-122-45	[675] 3000		[100] 450	40	3	[1.18] 0,335	

## Variable Stroke Straight Line Action Clamps | Technical Information | Dimensions





Part no. G-121/45

Important


plunger.


The Straight Line clamps are designed only for axial

load. In case of side load,


tional radial support of the

we recommend an addi-

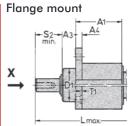





Part no. FL-120/--




Part no. FL-160/--

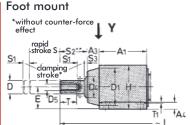





Part no. FO-120/--



Part no. FO-160/--FO-220/--

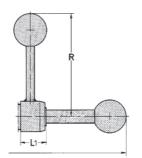



Part no. Ø length	For rapid stroke S	Weight ~ [lbs.] kg	For clamps
12/100	100	[0.30] 0,135	FO-120
12/200	200	[0.62] 0,280	FL-120
12/300	300	[0.82] 0,370	G-120
16/100	100	[0.88] 0,400	FO 1/0
16/200	200	[1.10] 0,500	FO-160 FL-160
16/300*	300	[1.54] 0,700	1 12-100
22/100	100	[2.20] 1,000	

[2.40] 1,090

[3.06] 1,390

FO-220

300 \*400 and 500 mm lengths available upon request.

200

22/200

22/300

Mounting t	уре	Part no. without plunger	Available rapid strokes S (order plunger separately)	Α	A1 ~	A2 ~	A3 ~	A4	A8	В	B1 ~	B2	Dh8	D1	D2	D3	D4
Foot mount		FO-120	100, 200, 300	_	44	19	12	6,3	8,5	52	68	40	12	35	_	6,5	20
	0 0	FO-160 FO-220	100, 200, 300 100, 200, 300	40 50	62 75	11 13	12 20	12 15	10 12	70 90	90 115	52 69	16 22	46 60	_ _	9 11	25 36
Flange mount		FL-120	100, 200, 300	-	44	44	12	6	8,5	52	68	_	12	30f7	40	6,5	20
	٨	FL-160	100, 200, 300	-	60	-	14	14	10	68	73	_	16	40f7	52	9	25
Through hole mount		G-120	100, 200, 300	-	44	-	12	10	8.5	-	-	-	12	M30 x1,5	40	-	20

	Mounting type		D5	D6	E	E1	Н	s	~ L vith ra trokes	:	LI	R	<b>S</b> 2	<b>S</b> 3	SW	SW1	т	ΤΊ	Т3
Mounting	type	plunger					~	100	200	300					~				
Foot mount		FO-120	M6	30	20	12,5	42	226	326	426	24	95	2,5	2, 5	-	11	12	-	10
		FO-160 FO-220	M8 M12	35 40	30 35	14,8 19,5	58 71	253 287	353 387	453 487	33 35	130 197	3 3	3 3	_	13 17	15 25	1 1	14 18
Flange mount	٥	FL-120	M6	30	-	12,5	-	226	326	426	24	95	2,5	2,5	-	11	12	-	10
	٨	FL-160	M8	35	28	14,8	-	253	353	453	33	130	3	3	_	13	15	1	14
Through hole mount		G-120	M6	30	_	12,5	-	226	326	426	24	95	2,5	2, 5	35	11	12	-	12

## Variable Stroke Straight Line Action Clamps | Technical Information | Dimensions

One-hand operation (the plunger and the hand wheel are operated simultaneously)



Part no. G-082/40 G-122/45


**Important** 

The Straight Line clamps are designed only for axial load. In case of side load, we recommend an additional radial support of the plunger.


# Flange mount View "X"


B1 B

Part no. FL-122/45



Part no. FL-162/60

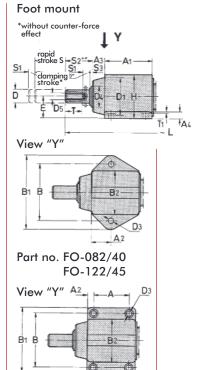




Mounting t	Mounting type		A	A <sub>1</sub>	A <sub>2</sub>	A <sub>3</sub>	A <sub>4</sub>	A <sub>5</sub>	В	B₁ ~	В2	D <sub>h8</sub>	D <sub>1</sub>	D <sub>2</sub>	D <sub>3</sub>	D <sub>4</sub>
Foot mount		FO-082-40 FO-122-45	_	37 44	15,3 19	10 12	5 6,3	6 8,5	44 52	56 68	35 40	8 12	30 35	-	4,5 6,5	16 20
	• •	FO-162-60	40	62	11	12	12	10	70	90	52	16	46	-	9	25
Flange mount		FL-122-45	_	44	44	12	6	85	52	68	_	12	30f7	40	6,5	20
	٨	FL-162-60	-	60	_	14	14	10	68	73	_	16	40f7	52	9	25
Through hole mount		G-082-40 G-122-45	_ _	37 44	_ _	10 12	8 10	6 8,5	- -	- -	- -	8 12	M24x1,5 M30x1,5	35 40	- -	16 20

Part no. FO-162/60

Mounting t	Mounting type		D <sub>5</sub>	D <sub>6</sub>	E	E <sub>1</sub>	H ~	L ~	L <sub>1</sub>	s <sub>2</sub>	s <sub>3</sub>	SW ~	sw <sub>1</sub>	т	т <sub>1</sub>	ТЗ
Foot mount		FO-082-40 FO-122-45	M5 M6	40 75	18 20	9,2 12,5	36 42	128 153	26 27	9 15	2,5 2,5	_ _	8 11	8 12	_ _	8 10
	• •	FO-162-60	M8	75	30	14.8	58	196	35	18	3	_	13	15	1	14
Flange mount	6	FL-122-45	M6	52	_	12,5	-	153	27	15	2,5	-	11	12	_	10
	٨	FL-162-60	M8	75	28	14,8	-	196	35	18	3	_	13	15	1	14
Through hole mount		G-082-40 G-122-45	M5 M6	40 52	- -	9,2 12,5	-	128 153	26 27	9 15	2,5 2,5	30 35	8 11	12 12	- -	8 10

## Variable Stroke Straight Line Action Clamps | Technical Information | Dimensions

One-hand operation (the plunger and the hand lever are operated simultaneously)

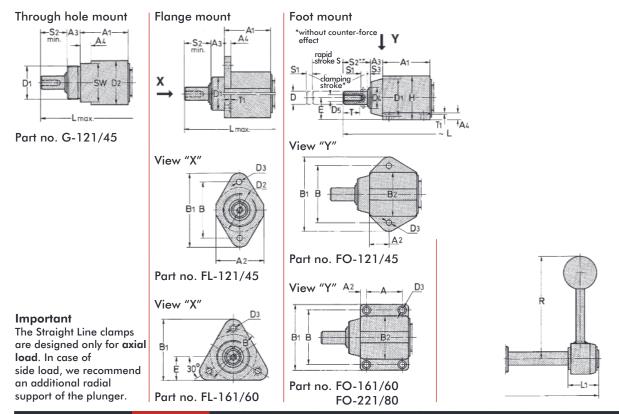

Mounting type		with plunger	A	A <sub>1</sub>	A <sub>2</sub> ~	A <sub>3</sub> ~	A <sub>4</sub>	A <sub>5</sub>	В	B <sub>1</sub> ∼	В <sub>2</sub>	D <sub>h8</sub>	D	1	D <sub>2</sub>	D <sub>3</sub>	D <sub>4</sub>
Foot mount		FO-121-45	-	44	19	12	6,3	8,5	52	68	40	12	3	5	-	6,5	20
		FO-161-60 FO-221-80	40 50	62 75	11 13	12 20	12 15	10 12	70 90		52 69	16 22	4 6	6 0	_	9 11	25 36
Flange mount	<b>(</b>	FL-121-45	-	44	44	12	6	8,5	52	68	_	12	30	)f7	40	6,5	20
		FL-161-60	-	60	-	14	14	10	68	73	_	16	40	)f7	52	9	25
Through ho mount	ole	G-121-45	-	44	-	12	10	8,5	-	_	-	12	M30	x1,5	40	-	20
Mounting <sup>.</sup>	Mounting type		D <sub>5</sub>	Е	E		H ~	L ~	L <sub>1</sub>	R ~	s <sub>2</sub>	S <sub>3</sub> ~	SW	sw <sub>1</sub>	Т	Т	Т3
Foot mount		FO-121-45	M6	20	12	,5 4	12	153	27	95	15	2,5	-	11	12	_	10
		FO-161-60 FO-221-80	M8 M12		1	/-   -	- 1	196 245	35 40	130 197	18 20	3 3	-	13 17	15 25	1 1	14 18

Mounting type		with plunger	D <sub>5</sub>	E	Ε <sub>1</sub>	H ~	L ~	L	R ∼	s <sub>2</sub>	s₃ ~	SW	sw <sub>1</sub>	T	т	ТЗ
Foot mount		FO-121-45	M6	20	12,5	42	153	27	95	15	2,5	_	11	12	-	10
	• •	FO-161-60 FO-221-80	M8 M12	30 35	14,8 19,5	58 71	196 245	35 40	130 197	18 20	3 3	- -	13 17	15 25	1 1	14 18
Flange mount		FL-121-45	M6	_	12,5	-	153	27	95	15	2,5	-	11	12	-	10
	٨	FL-161-60	M8	28	14,8	_	196	35	130	18	3	_	13	15	1	14
Through hole mount		G-121-45	M6	-	12,5	-	153	27	95	15	2,5	35	11	12	-	10